

Tally Manager makes it **fast** and **easy** to **navigate** through your tally system to
 Check system configuration – Make changes – Troubleshoot

Using a web browser, click on the OVERVIEW link, found at the top of every page

The screenshot shows the 'Tally Manager System Overview' page. At the top, there are three navigation tabs: 'Overview' (circled in red), 'Protocol Assignment', and 'System'. Below the tabs is the title 'Tally Manager System Overview' and a sub-header 'Click on link below to access configuration page'. The main content is divided into two sections: 'FACILITY WIDE DEVICES' and 'ROOM SPECIFIC DEVICES'. Each section contains a table of devices with callouts pointing to specific configuration links.

FACILITY WIDE DEVICES		
1st Floor Machine Room Router Jupiter Router CM-4000 Ch #4 Located in Rack 16	1st Floor Machine Room Camera Tallies Studio 1&2 Cameras Located in Rack104-1	Closet behind Eng. Shop On-aAir Tallies Studio and equipment on-air lights

ROOM SPECIFIC DEVICES			
PCR 21 PCR21 Switcher Sony MVS8000 PCR21 MonitorWall Evertz MVP in rack 103-4	PCR 22 PCR22 Switcher GV Kayenne PCR22 MonitorWall Kaleido in rack 101-8	Room 3 RM3 MonitorWall 2nd FIR M.R. Rack 54-10 RM3 Switcher Snell Kahunna	Studio 1 STD1 Switcher GV Kayenne STD1 MonitorWall Kaleido in rack 102-8

TALLY MANAGER™

Quickly and easily:

- View Router Configuration
- View Video Signal Source Names
- Change Router Configuration
- Change Source Alias Configuration

Click here!

TALLY MANAGER SYSTEM OVERVIEW

FACILITY WIDE DEVICES	
1st Floor Machine Room	1st Floor Mac
Router	Camera Tallies
Jupiter Router CM-4000 Ch #4 Located in Rack 104-1	Studio 1&2 Car in Rack 104-1

TO GET THERE

Protocol Assignment

System

Edit 0-99 / Backup / Restore / Go Back / Refresh / Remote DC List

Channel 1 Tally Manager Input Configuration

Input #	Source Type	Source Device	Output Number	Level	System Source Name (SSN)	SSN State Primary / Backup	Alias
0	UNASSIGNED						
1	FIXED				CAM-1	VALID	LOCAL
2	FIXED				CAM_2	VALID	LOCAL
3	FIXED				CAM_3	VALID	LOCAL
4	FIXED				CAM_4	VALID	LOCAL
5	FIXED				VTR_101	VALID	DISABLED
6	FIXED				VTR_102	VALID	DISABLED
7	FIXED				VTR_103	VALID	DISABLED
8	FIXED				GFX1	VALID	DISABLED
9	FIXED				GFX2	VALID	DISABLED
10	FIXED				SS1	VALID	DISABLED
11	FIXED				SS2	VALID	DISABLED
12	FIXED				VS23-1	VALID	DISABLED
13	FIXED				VS23-2	VALID	DISABLED
14	FIXED				VS23-3	VALID	DISABLED
15	FIXED				VS23-4	VALID	DISABLED
16	FIXED				SAT-1	VALID	GLOBAL
17	FIXED				SAT-2	VALID	GLOBAL
18	FIXED				SAT-3	VALID	GLOBAL
19	FIXED				SAT-4	VALID	GLOBAL
20	FIXED				SAT-5	VALID	GLOBAL
21	FIXED					VALID	DISABLED

TALLY MANAGER™

Quickly and easily:

- View / Edit Switcher Configuration
- View Routed Video Signal Source Names
- View Video Signal's Alias Configuration
- Change Source Alias Configuration
- Jump to Source Device's Configuration Page

Click here!
TALLY MANAGER SYSTEM OVERVIEW

ROOM SPECIFIC DEVICES	
PCR 21	PCR 22
PCR21 Switcher Sony MVS8000	PCR22 Swi GV Kayenn
PCR21 MonitorWall Evertz MVP in rack 103-4	PCR22 Mon Teido in ra

TO GET THERE

Edit / [Backup](#) / [Restore](#) / [Go Back](#) / [Refresh](#) / [Remote DC List](#)

Channel 2 Tally Manager Input Configuration

Input #	Source Type	Source Device	Output Number	Level	System Source Name (SSN)	SSN State Primary / Backup	Alias
0	UNASSIGNED						
1	DYNAMIC	Router	1	1	CAM_1	VALID	(LOCAL)
2	DYNAMIC	Router	2	1	CAM_2	VALID	(LOCAL)
3	DYNAMIC	Router	3	1	CAM_3	VALID	(LOCAL)
4	DYNAMIC	Router	4	1	CAM_4	VALID	(LOCAL)
5	DYNAMIC	Router	5	1	VTR_102	VALID	(DISABLED)
6	DYNAMIC	Router	6	1	VTR_101	VALID	(DISABLED)
7	DYNAMIC	Router	7	1	VTR_103	VALID	(DISABLED)
8	DYNAMIC	Router	8	1	GFX2	VALID	(DISABLED)
9	DYNAMIC	Router	9	1	VS23-2	VALID	(DISABLED)
10	DYNAMIC	Router	10	1	SAT-1	VALID	(GLOBAL)
11	UNASSIGNED						

Jump to router configuration page

Click here!

TALLY MANAGER™

Click here!

TALLY MANAGER SYSTEM OVERVIEW

ROOM SPECIFIC DEVICES	
PCR 21	PCR 22
PCR21 Switcher Sony MVS8000	PCR22 Sw GV Kayenn
PCR21 MonitorWall Evertz MVP in rack T05-4	PCR22 Mo Kaleido in r

Quickly and easily:

- View / Edit Monitor Wall Configuration
- View Routed Video Signal Source Names
- View Multi-viewer Card Status- online/offline
- Select Prefix Type and Enter Text
- Jump to Source Device's Configuration Page

TO GET THERE

Click here!

Jump to router configuration page

Click here!

Jump to switcher configuration page

PCR21 MonitorWall: Channel 4 Monitor Wall Input Configuration

Line #	Card Label	UMD Left Tally (T1) Right Tally (T2)	Source Type	Source Device	Output Number	Level	System Source Name (SSN)	SSN State Primary / Backup	Alias	Prefix Selection	Prefix
1	No Card	0	UNASSIGNED							NONE	
		0	UNASSIGNED								
		0	UNASSIGNED								
2	MV Card 1 Out1	1	DYNAMIC	Router	1	1	CAM_1	VALID / N/A	(DISABLED)	NONE	
		2	DYNAMIC	PCR21 Switcher	1			VALID / N/A			
		3	DYNAMIC	PCR21 Switcher	2			VALID / N/A			
3	MV Card 1 Out1	4	DYNAMIC	Router	2	1	CAM_2	VALID / N/A	(DISABLED)	FIXED	STD1:
		5	DYNAMIC	PCR21 Switcher	1			VALID / N/A			
		6	DYNAMIC	PCR21 Switcher	2			VALID / N/A			
4	MV Card 1 Out1	7	DYNAMIC	Router	3	1	CAM_3	VALID / N/A	(DISABLED)	ALIAS	
		8	DYNAMIC	PCR21 Switcher	1			VALID / N/A			
		9	DYNAMIC	PCR21 Switcher	2			VALID / N/A			
5	MV Card 1 Out1	10	DYNAMIC	Router	4	1	CAM_4	VALID / N/A	(DISABLED)	SSN	
		11	DYNAMIC	PCR21 Switcher	1			VALID / N/A			
		12	DYNAMIC	PCR21 Switcher	2			VALID / N/A			
		13	DYNAMIC	Router	5	1	SS1	VALID / N/A	(DISABLED)	NONE	